




# CHEVY CORVETTE EARLY 1970

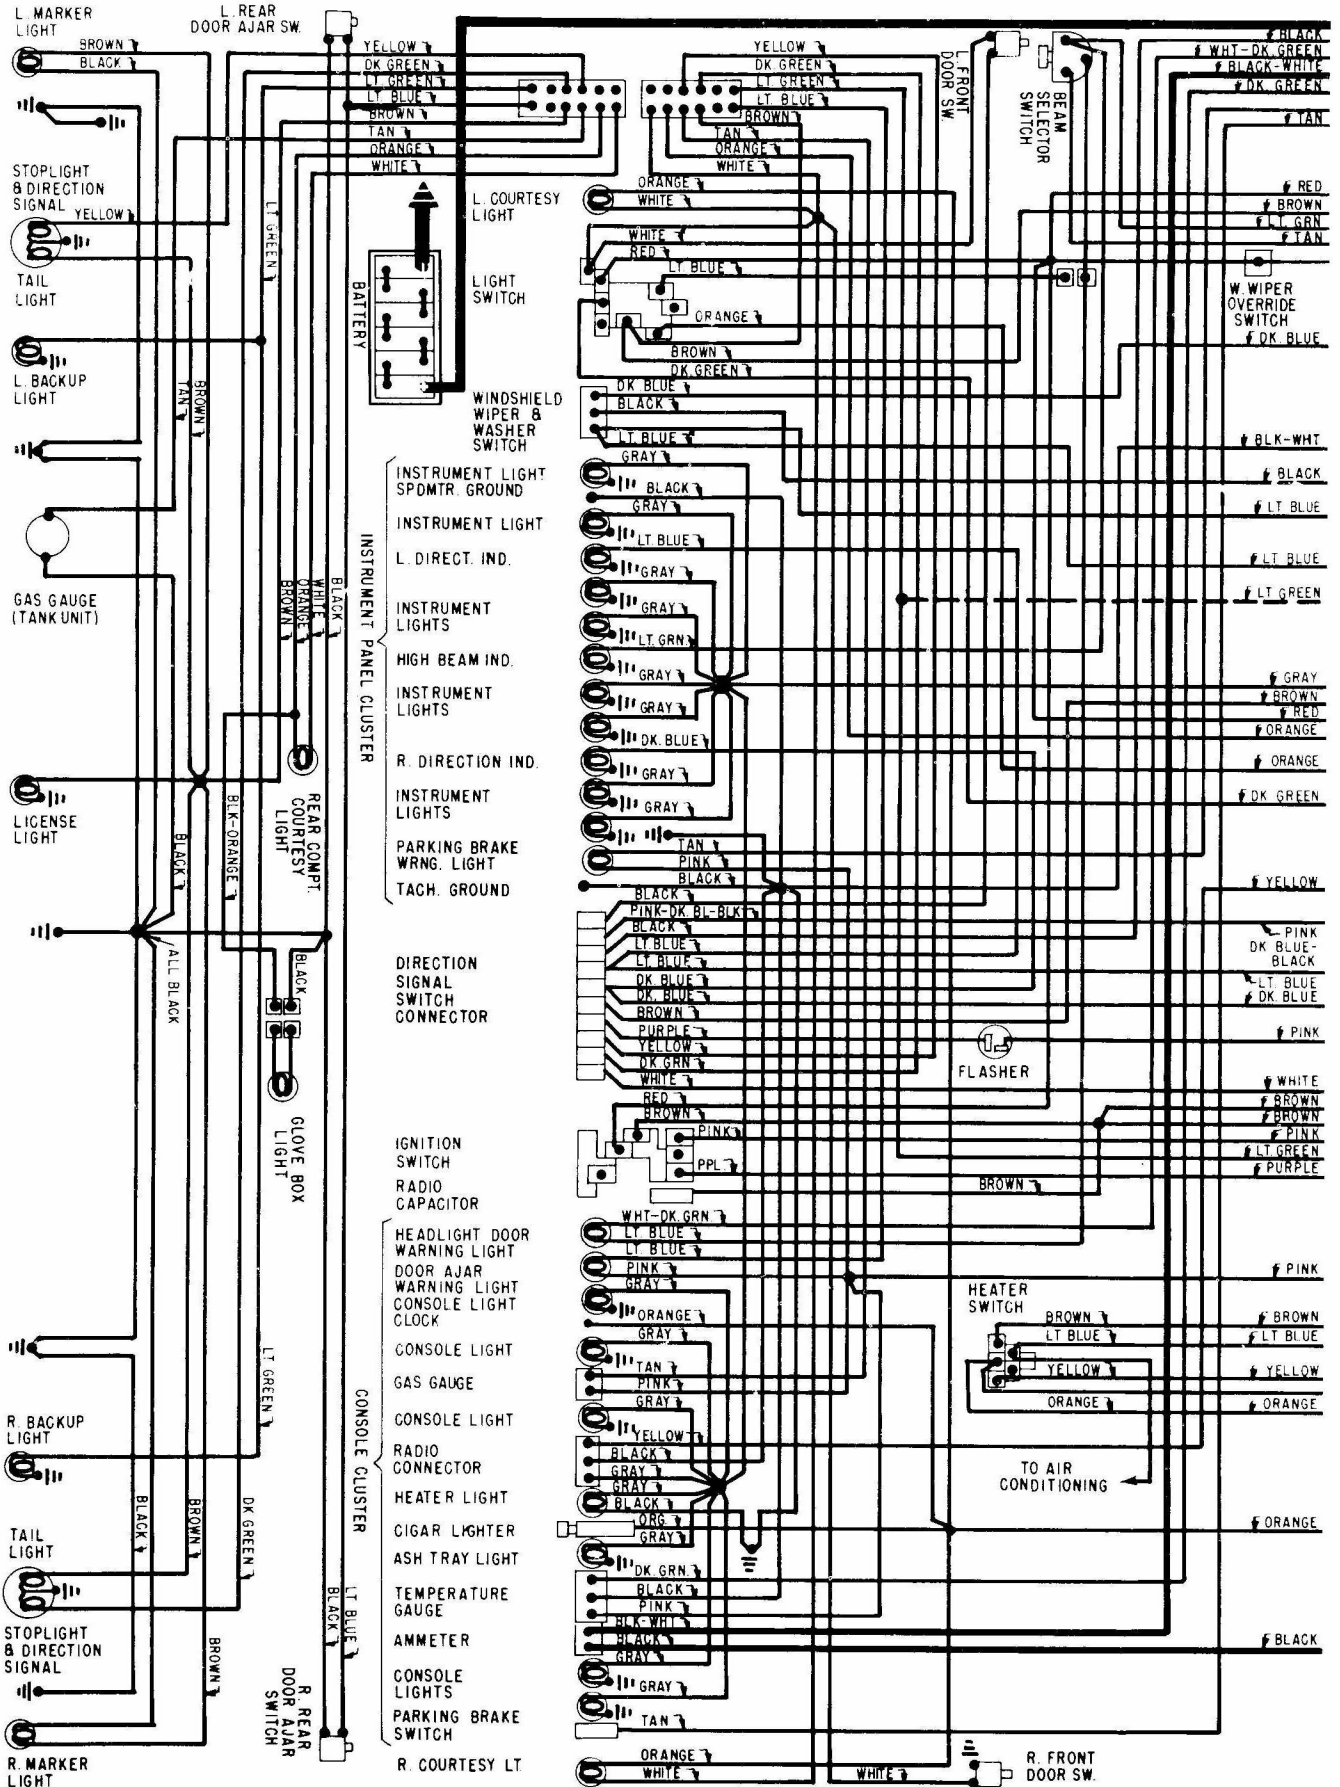


# CHEVY CORVETTE EARLY 1970

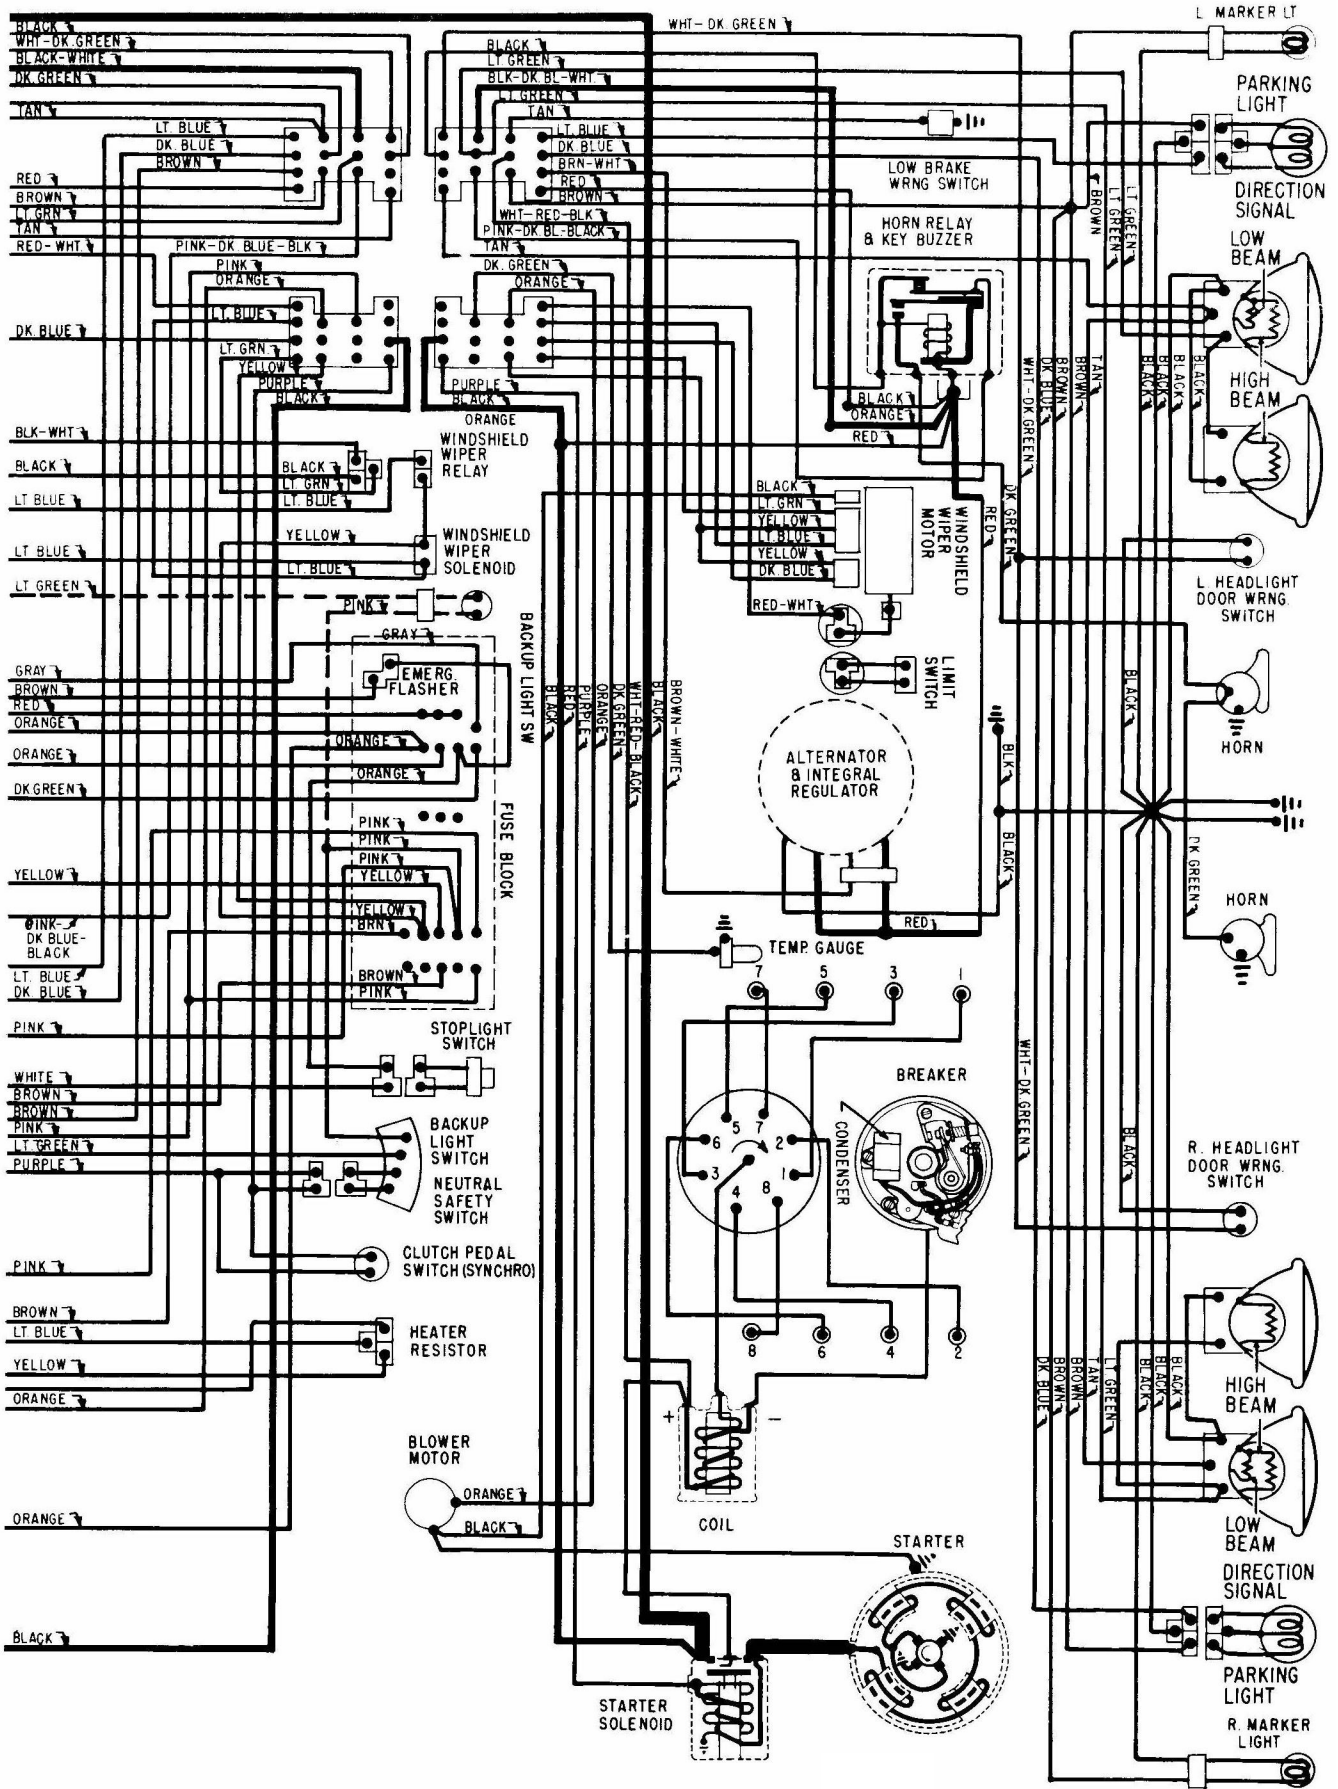


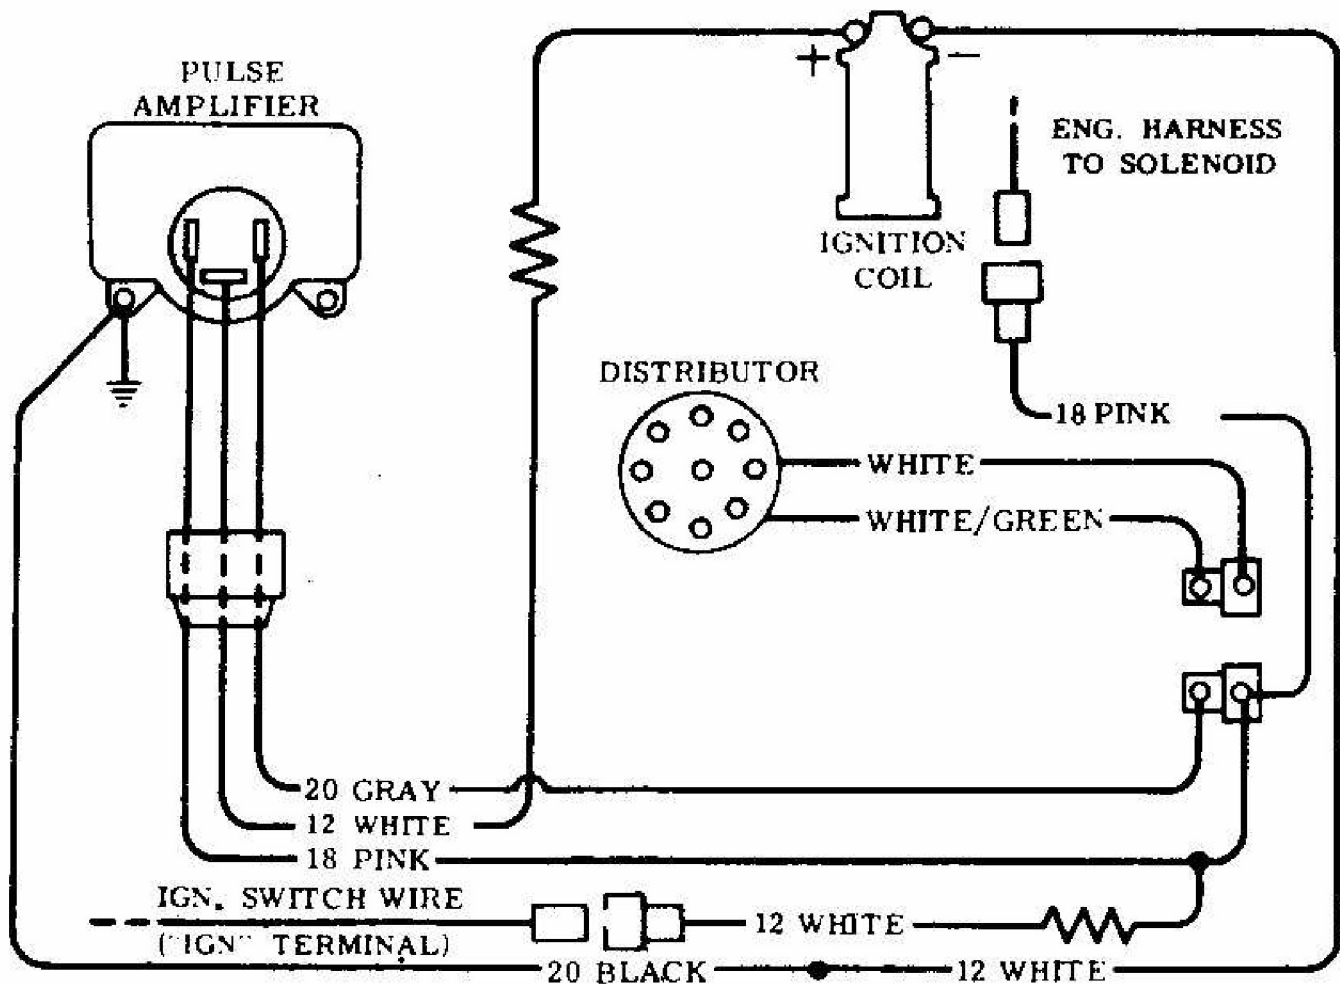


**CORVETTE TRANSISTOR IGNITION CIRCUIT**

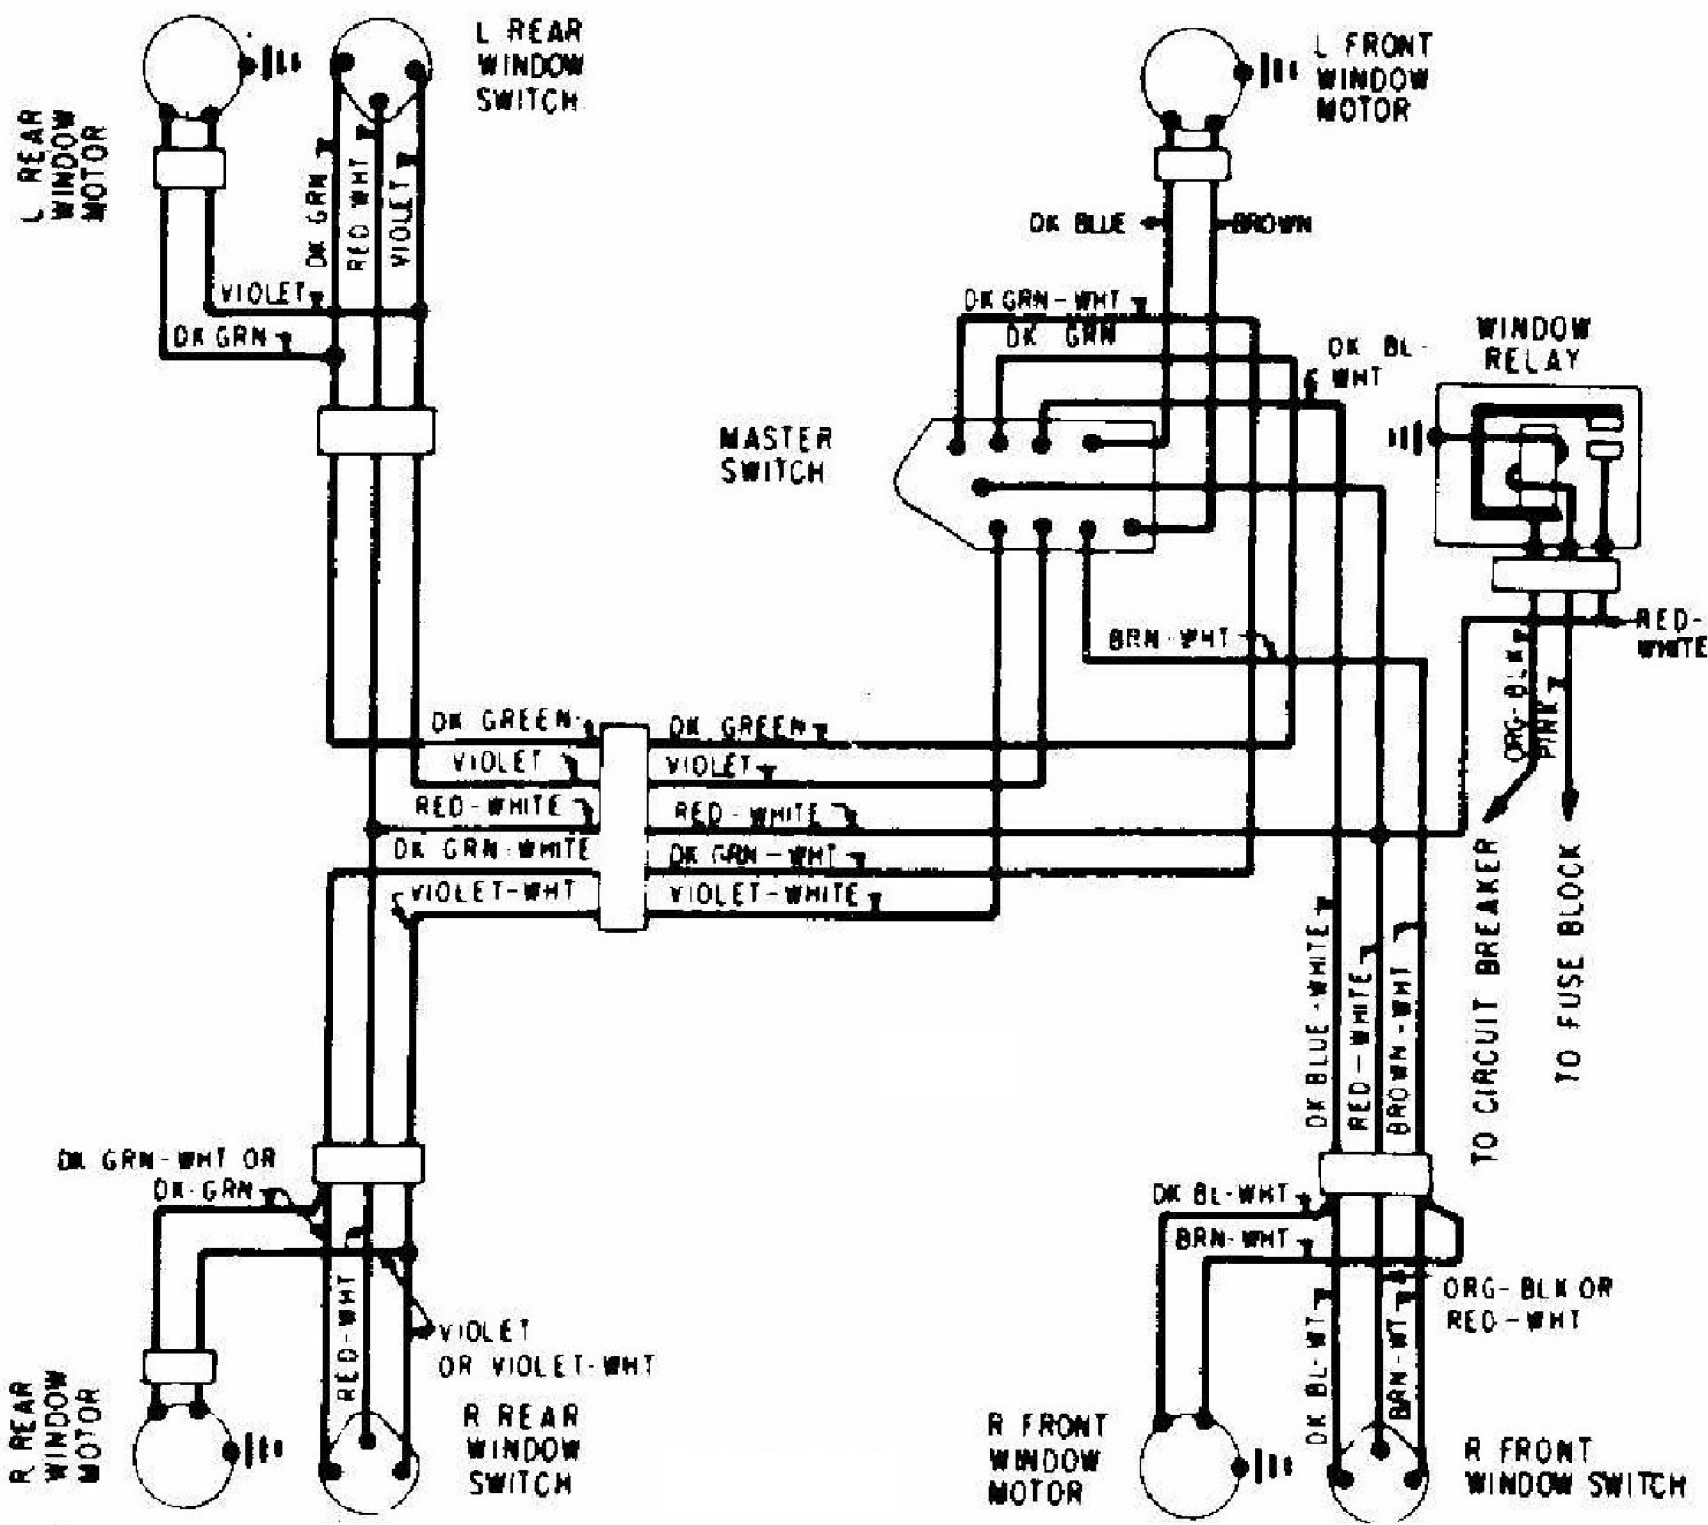


**CHEVROLET POWER WINDOW WIRING**

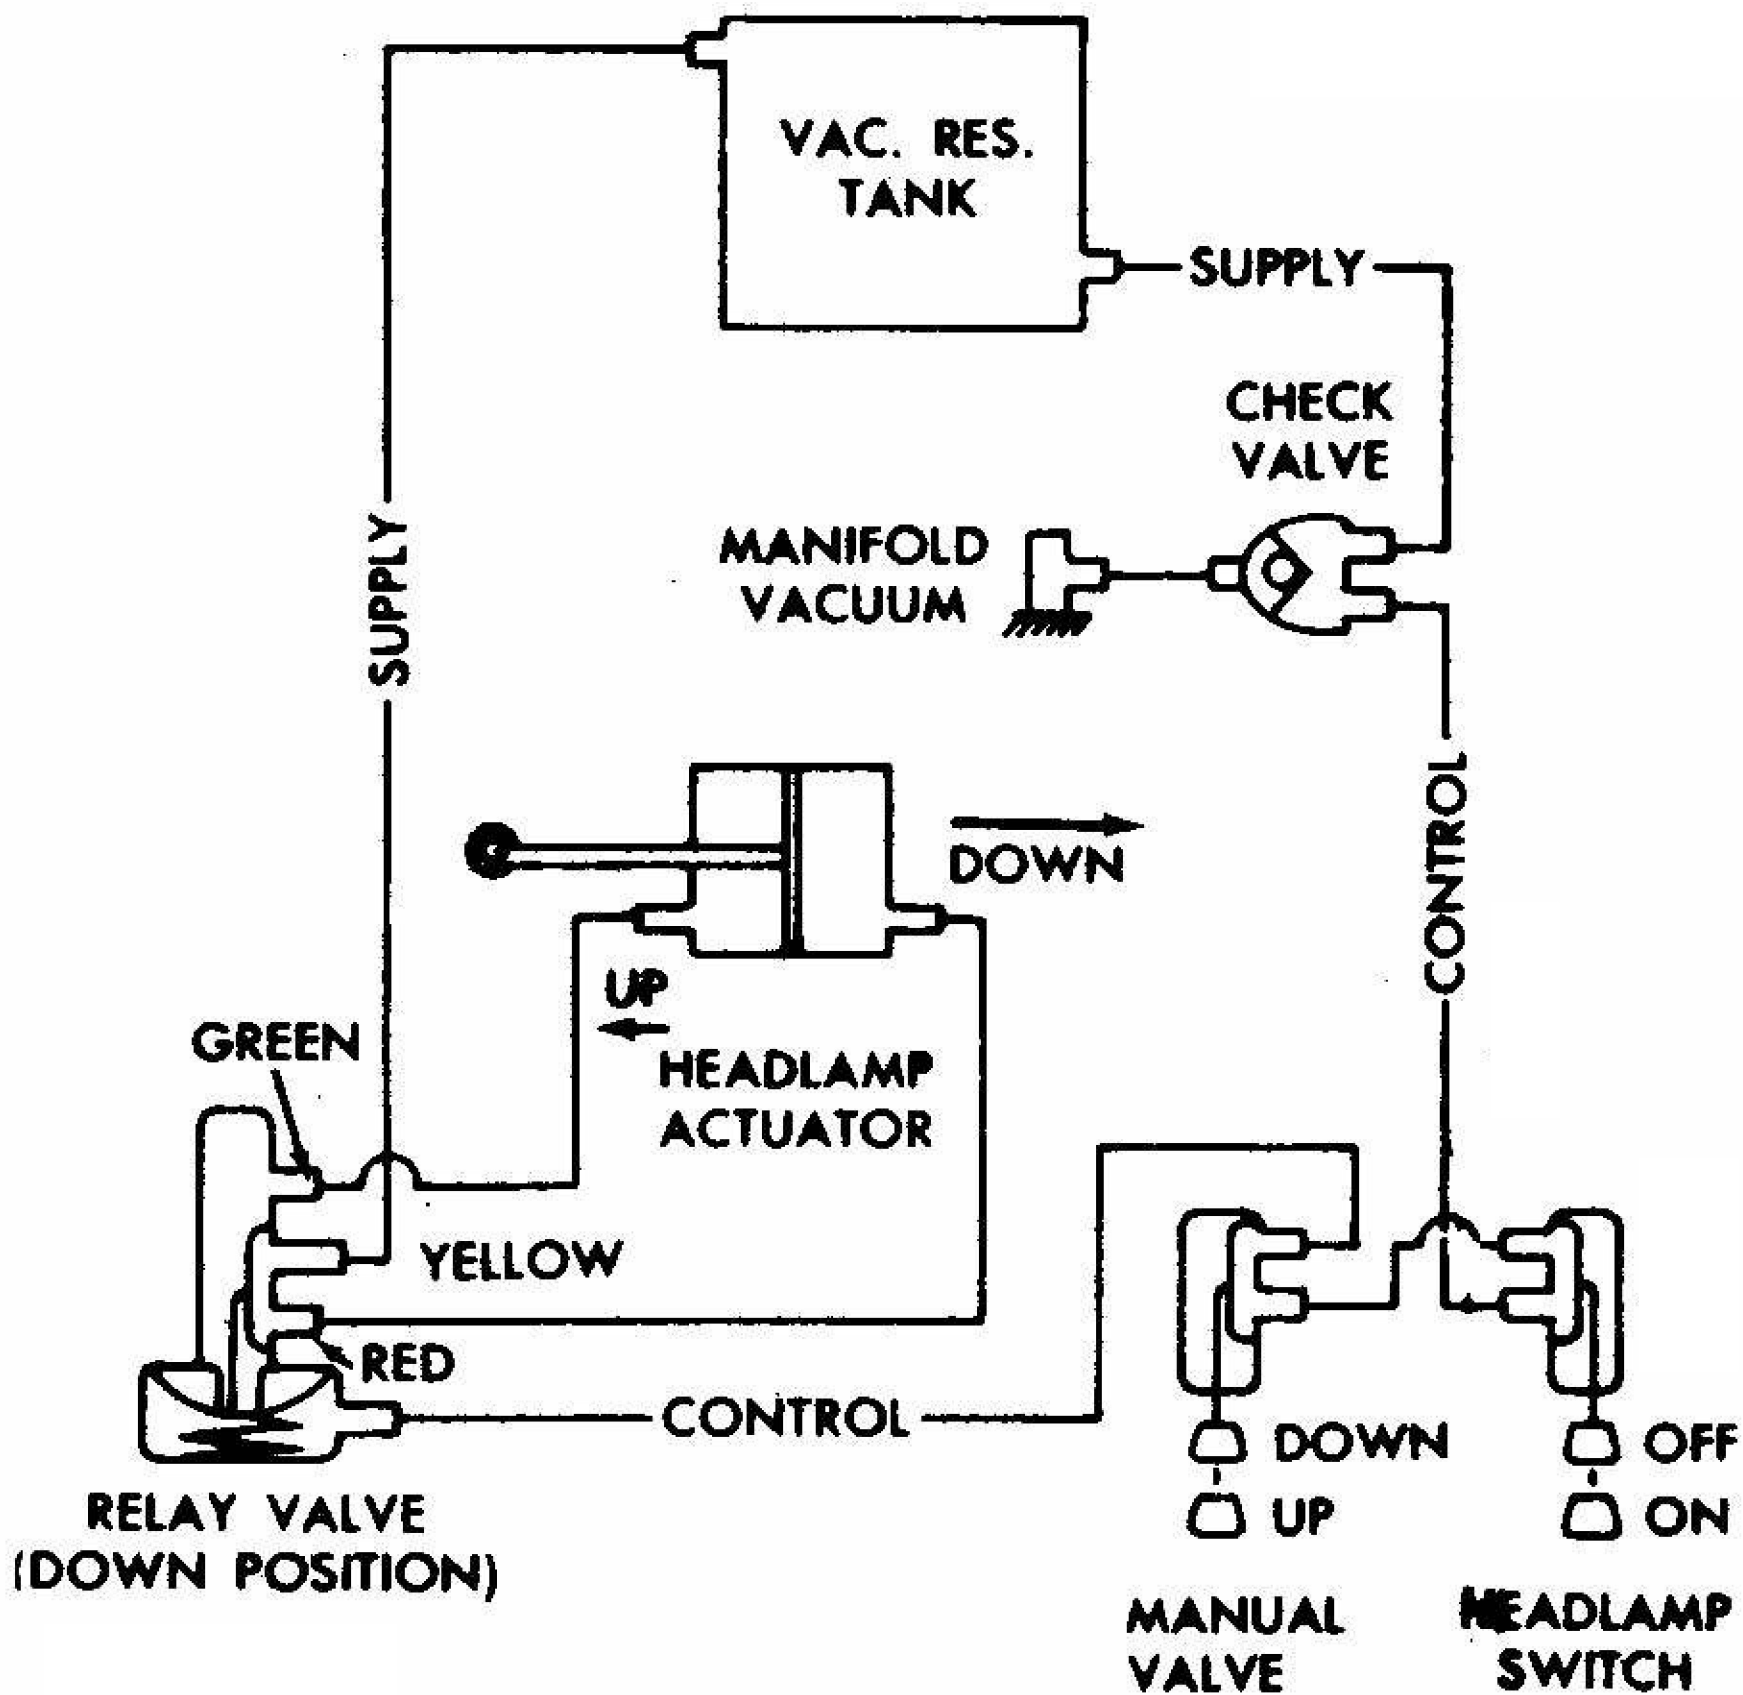


**CORVETTE HEADLIGHT VACUUM CONTROL  
SCHEMATIC CIRCUITS**

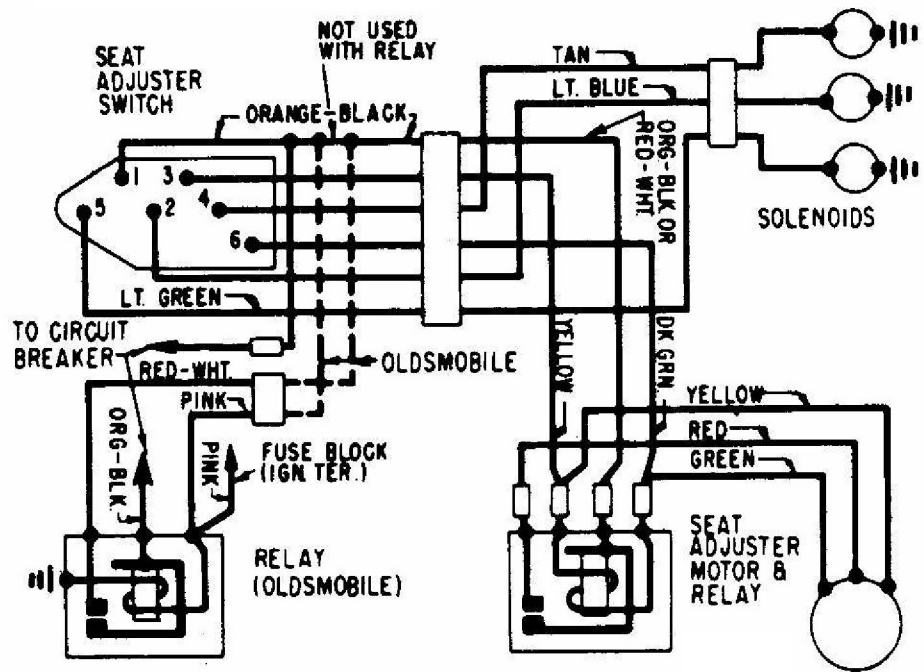

GENERAL MOTORS  
6-WAY SEAT WIRING DIAGRAM

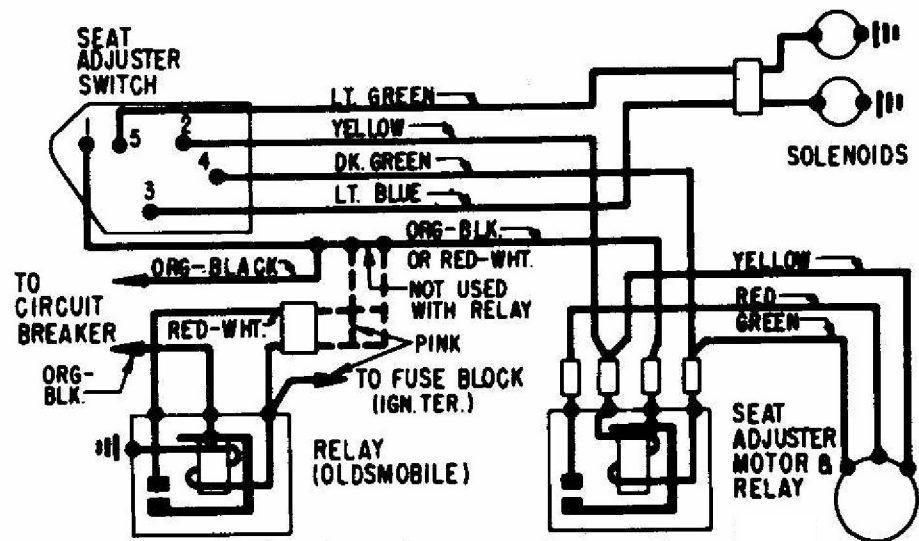

GENERAL MOTORS  
4-WAY SEAT WIRING DIAGRAM  
(SWITCH IN SEAT SIDE PANEL)

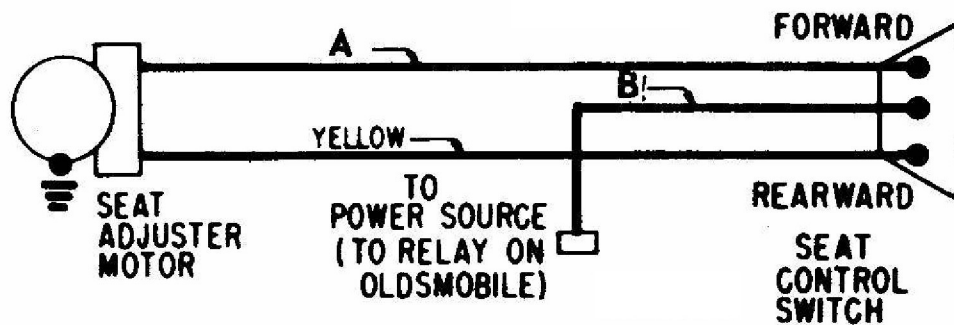

GENERAL MOTORS  
2-WAY SEAT ADJUSTER WIRING DIAGRAM